QUALITY CONTROL STATUS

	QCFlag4 (air temperature differences)	QCFlag5 (air temperature stationarity)	QCFlag2 (air temperature data limits)	Status ¹
Air temperature	0	0	0	00
	0	0	1	01
	0	1	0	02
	0	1	1	03
	1	0	0	04
	1	0	1	05
	1	1	0	06
	1	1	1	07

	QCFlag6 (air humidity stationarity)	QCFlag3 (air humidity data limits)	Status ²
Air humidity	0	0	00
	0	1	01
	1	0	02
	1	1	03

¹ QC status for air temperature is calculated as QCFlag2*1+QCFlag5*2+QCFlag4*4
² QC status for air humidity is calculated as QCFlag3*1+QCFlag6*2

Wind	QCFlag8 (wind direction stationarity)	QCFlag7 (wind speed stationarity)	QCFlag6 (wind direction differences)	QCFlag5 (wind speed differences)	QCFlag4 (wind and gusts speed limits)	QCFlag3 (gusts speed limits)	QCFlag2 (wind speed limits)	Status ³
	0	0	0	0	0	0	0	00
	0	0	0	0	0	0	1	01
	1	1	1	1	1	1	1	7F

³ QC status for wind is calculated as QCFlag2*1+QCFlag3*2+QCFlag4*4+QCFlag5*8+QCFlag6*16+QCFlag7*32+QCFlag8*64